

This article includes the possible fault codes on a Webasto diesel space heater and how to clear or fix it based on the codes

Error	Detail	Fix
H02	Flame failure	<p>The heater failed to ignite:</p> <ul style="list-style-type: none">• Pull the 20amp heater fuse and wait 30 seconds before re-fitting it.• Clear the faults on the gauge by resetting it and try the heater again.• Repeat this fix a handful of times if the fault reoccurs.• If still not working after many attempts then check the fuel pump and fuel source.
T12	Electrical fault	<p>Electrical fault at heater:</p> <ul style="list-style-type: none">• Check if fuses are blown first - replace if necessary and determine what has blown the fuses.• If fuses aren't blown then check main harness is fully plugged into the heater.
H94	Temperature sensor failure	<p>Temperature sensor failure detected:</p> <ul style="list-style-type: none">• Ensure the supplied resistor has been fitted to the wires on the heater labelled "temperature sensor" on the heater loom. (2KW Heater only)
H07	Lock out mode	<p>The heater has faulted too many times and gone into lock mode.</p> <ul style="list-style-type: none">• Perform a full heater reset by removing all fuses for 30 seconds then re-fitting them.• Clear all the faults on the controller by resetting it.• Then try running the heater again.